


# HXYx 2 axes

● Pole type   ● Cable carrier

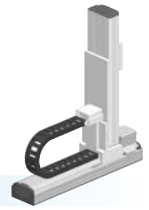

## Ordering method

**HXYx - C - P2**   **RCX320-2**   **R**

Model	Cable	Combination	X-axis stroke	Y-axis stroke	Cable	Controller / Number of controllable axes	Safety standard	Regenerative unit	Option A (OP.A)	Option B (OP.B)	Vision System	Absolute battery
			25 to 125cm	25 to 105cm	3L: 3.5m 5L: 5m 10L: 10m	RCX320-2		R				

Specify various controller setting items. RCX320 ▶ **P.660**

**RCX222HP**   **R**

Controller	Usable for CE	Regenerative unit	I/O selection 1	I/O selection 2
RCX222HP		R		

Specify various controller setting items. RCX222 ▶ **P.670**

## Specification

	X-axis	Y-axis
<b>Axis construction</b> <small>Note 1</small>	F20	F20-BK
<b>AC servo motor output (W)</b>	600	600
<b>Repeatability</b> <small>Note 2</small> (mm)	+/-0.01	+/-0.01
<b>Drive system</b>	Ball screw φ20	Ball screw φ20
<b>Ball screw lead</b> <small>Note 3</small> (Deceleration ratio) (mm)	20	10
<b>Maximum speed</b> <small>Note 4</small> (mm/sec)	1200	600
<b>Moving range (mm)</b>	250 to 1250	250 to 1050
<b>Robot cable length (m)</b>	Standard: 3.5   Option: 5,10	

Note 1. Use caution that the flame machining (installation holes, tap holes) differs from single-axis robots.  
 Note 2. Positioning repeatability in one direction.  
 Note 3. Leads not listed in the catalog are also available. Contact us for details.  
 Note 4. When the X-axis/Y-axis stroke is longer than 850mm, resonance of the ball screw may occur depending on the operation conditions (critical speed). In this case, reduce the speed setting on the program by referring to the maximum speeds shown in the table below.


## Maximum payload (kg)

Y stroke (mm)	XY 2 axes
250 to 1050	30

## Controller

Controller	Operation method
RCX320-R	Programming / I/O point trace / Remote command / Operation using RS-232C communication
RCX222HP-R	Programming / I/O point trace / Remote command / Operation using RS-232C communication

## HXYx 2 axes P2

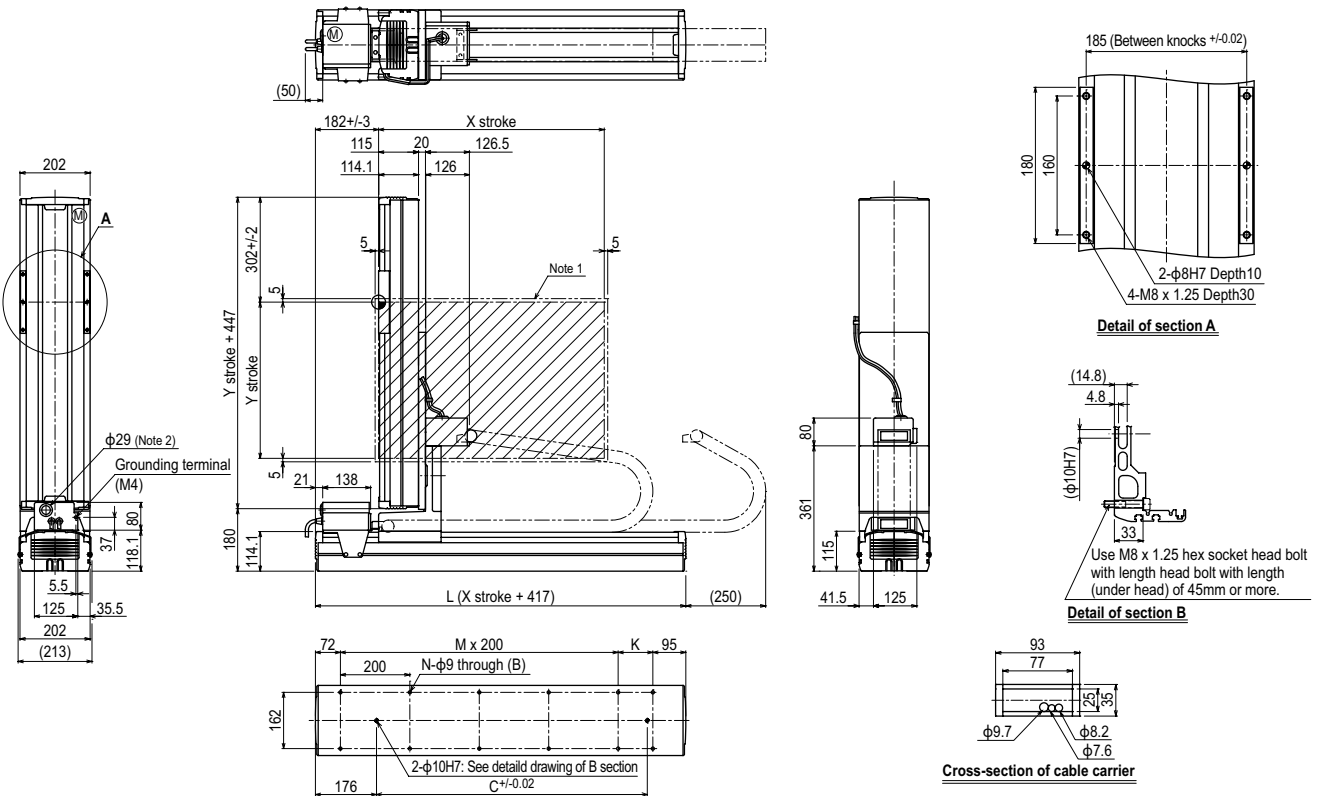

X stroke	250	350	450	550	650	750	850	950	1050	1150	1250
<b>L</b>	667	767	867	967	1067	1167	1267	1367	1467	1567	1667
<b>K</b>	100	200	100	200	100	200	100	200	100	200	100
<b>C</b>	420	420	600	600	780	708	960	960	1140	1320	1320
<b>M</b>	2	2	3	3	4	4	5	5	6	6	7
<b>N</b>	8	8	10	10	12	12	14	14	16	16	18
<b>Y stroke</b>	250	350	450	550	650	750	850	950	1050		
<b>Maximum speed for each stroke (mm/sec)</b> <small>Note 3</small>	<b>X-axis</b>		1200		960		840	720	600	480	
	<b>Y-axis</b>		600		480		420	360			
	<b>Speed setting</b>		-		80%		70%	60%	50%	40%	

Note 1. The moving range when returning to origin and the stop position when stopping by the mechanical stopper.  
 Note 2. User cable extraction port.

Note 3. When the X-axis/Y-axis stroke is longer than 850mm, resonance of the ball screw may occur depending on the operation conditions (critical speed). In this case, reduce the speed setting on the program by referring to the maximum speeds shown in the table at the left.