

Robot Language Table

General commands

Language	Function
DECLARE	Declares that a label or sub-procedure is in an external program.
DEF FN	Defines a function that is available to the user.
DIM	Declares the name of an array variable and the number of elements.
EXIT FOR	Terminates a FOR statement to NEXT statement loop.
FOR to NEXT	Controls repetitive operations
GOSUB to RETURN	Jumps to a subroutine with the label specified by a GOSUB statement and executes the subroutine.
GOTO	Unconditionally jumps to the line specified by a label.
HALT	Stops a program and resets it.
HOLD	Pauses a program.
IF	Allows control flow to branch according to conditions.
LET	Executes a specified assignment statement.
ON to GOSU	Jumps to a subroutine with each label specified by a GOSUB statement according to conditions and executes the subroutine.
ON to GOTO	Jumps to each line specified by a label according to conditions.
REM	All characters that follow REM or an apostrophe (') are viewed as comments.
SELECT CASE to END SELECT	Allows control flow to branch according to conditions.
SWI	Switches the currently executed program to a specified program, and executes from the first line after compiling.
WHILE to WEND	Controls repetitive operations.
Label statement	Defines "labels" in program lines.

Robot operation

Language	Function
ABSRST	Performs return-to-origin along robot absolute motor axes.
DRIVE	Performs an absolute movement of each axis in the main group.
DRIVEI	Performs a relative movement of each axis in the main group.
MOVE	Performs an absolute movement of the main robot axes.
MOVEI	Performs a relative movement of the main robot axes.
ORIGIN	Performs return-to-origin on an incremental mode axis or absolute search on a semi-absolute mode axis.
PMOVE	Performs a pallet movement of the main robot axes.
SERVO	Controls the servo ON/OFF of the specified axes in the main group or all axes (in main group and sub group).

I/O control

Language	Function
DELAY	Waits for the specified length of time (ms).
DO	Outputs the specified value to the DO ports.
LO	Outputs the specified value to the LO port to prohibit axis movement or permit axis movement.
MO	Outputs the specified value to the MO ports.
OUT	Turns ON the bits of the specified output ports and the command statement ends.
RESET	Turns OFF the bits of the specified output ports.
SET	Turns ON the bits of the specified output ports
SO	Outputs the specified value to the SO port.
TO	Outputs the specified value to the TO port.
WAIT	1. Waits until the condition in DI/DO conditional expression are met. 2. Waits until positioning on the robot axes is complete (within the tolerance range).

Coordinate control

Language	Function
CHANGE	Switches the hand of the main robot.
HAND	Defines the hand of the main robot.
RIGHTY / LEFTY	Selects whether the main robot will be "right-handed" or "left-handed" when moving to a point specified on a Cartesian coordinate system.
SHIFT	Sets the shift coordinates for the main robot by using the shift data specified by a shift variable.

Condition change

Language	Function
ACCEL	Changes the acceleration coefficient parameter of the main group.
ARCH	Changes the arch position parameter of the main group.
ASPEED	Changes the automatic movement speed of the main group.
AXWGHT	Changes the axis tip weight parameter of the main group.
DECEL	Changes the deceleration rate parameter of the main group.
ORGORD	Sets the axis sequence parameter to perform return-to-origin and absolute search in the main group.
OUTPOS	Changes the OUT position parameter of the main group.
PDEF	Defines the pallet used to execute a pallet movement command.
SPEED	Changes the program speed for the main group.
TOLE	Changes the tolerance parameter of the main group.
WEIGHT	Changes the tip weight parameter of the main robot.

Communication control

Language	Function
ONLINE / OFFLINE	Changes communication mode and initialize the communication port.
SEND	Sends the read file data into a write file.

Screen control

Language	Function
PRINT	Displays the value of specified variable on the MPB/RPB screen.

Key control

Language	Function
INPUT	Assigns a value to the variable specified from the MPB/RPB.

Procedure

Language	Function
CALL	Calls up sub-procedures defined by the SUB and END SUB statements.
EXIT SUB	Terminates the sub-procedure defined by the SUB and END SUB statements.
SHARED	Does not permit variables declared with a program written outside a subprocedure (SUB to END SUB) to be passed on as dummy arguments, but allows them to be referred to with a sub-procedure.
SUB to END SUB	Defines a sub-procedure.

Task control

Language	Function
CHGPRI	Changes the priority of the specified task.
CUT	Terminates a task currently being executed or temporarily stopped.
EXIT TASK	Terminates its own task currently being executed.
RESTART	Restarts a task that is temporarily stopped.
START	Sets the task number and priority of the specified task and starts that task.
SUSPEND	Temporarily stops another task being executed.

Error control

Language	Function
ON ERROR GOTO	If an error occurs during program execution, this command allows the program to jump to the error processing routine specified by the label without stopping the program, or stops the program and displays the error message.
RESUME	Resumes the program execution after recovery from an error. This command is used in the error processing routine.
ERL	Gives the line number where an error occurred.
ERR	Gives the error code number when an error occurred.

PATH control

Language	Function
PATH	Sets the PATH motion on the main robot axis.
PATH END	Terminates the path setting for PATH motion.
PATH SET	Starts the path setting for PATH motion.
PATH START	Starts the PATH motion.

Torque control

Language	Function
DRIVE (with torque limit option)	Executes an absolute movement command on each axis in the main group.
TORQUE	Changes the maximum torque instruction for the specified main group axis.
TRQTIME	Sets the current limit time-out period on the specified main group axis when using a torque limit setting option in the DRIVE statement.
TRQTIME	Sets the current limit time-out period on the specified main group axis when using a torque limit setting option in the DRIVE statement.

Articulated robots
YA

Linear conveyer modules
LCM

Single-axis robots
CX

Motor-less single axis actuator
Robomity

Compact single-axis robots
TRANSEVO

Single-axis robots
FLIP-X

Linear motor single-axis robots
PHASER

Cartesian robots
XY-X

SCARA robots
YK-X

Pick & place robots
YP-X

CLEAN

CONTROLLER

INFORMATION

Robot positioner

Pulse string driver

Robot controller

RCXV2+ Electric gripper

Option