

Ordering method

RCX221/RCX221HP

RCX221

Controller ^{Note 1}

RCX221
RCX221HP

Usable for CE

No entry: Standard
E: CE marking

Regenerative unit ^{Note 2}

No entry: None
R: RG2

Input/Output Selection 1

N: NPN
P: PNP
CC: CC-Link
DN: DeviceNet™
PB: PROFIBUS
YC: YC-Link ^{Note 3}

Input/Output Selection 2

No entry: None
N1: OP.DIO24/16 (NPN)
P1: OP.DIO24/16 (PNP)

Note 1. Driver selection and regenerative unit selection depends on the robot type.
See Specification selection table on following page.

Note 2. The regenerative unit (option) is required when operating a model designated by YAMAHA or a load with a large inertia.

Note 3. Available only for the master.

RCX222/RCX222HP

RCX222

Controller ^{Note 1}

RCX222
RCX222HP

Usable for CE

No entry: Standard
E: CE marking

Regenerative unit ^{Note 2}

No entry: None
R: RG2

Input/Output Selection 1

N: NPN
P: PNP
CC: CC-Link
DN: DeviceNet™
PB: PROFIBUS
YC: YC-Link ^{Note 3}

Input/Output Selection 2

No entry: None
N1: OP.DIO24/16 (NPN)
P1: OP.DIO24/17 (PNP)

Note 1. Driver selection and regenerative unit selection depends on the robot type.
See Specification selection table on following page.

Note 2. The regenerative unit (option) is required when operating a model designated by YAMAHA or a load with a large inertia.

Note 3. Available only for the master.