

I/O signal list

Type	Signal Name	Open collector	Line driver	Description	
Inputs	OPC	Open collector power supply input	(Connection prohibited. ^{Note 2})	Input the power supply for the open collector. (DC5 to 24V +/- 10%)	
	PULS1	(Connection prohibited. ^{Note 1})	Command pulse input (+)	Input terminal for pulse train input commands. Select from 3 command forms by changing parameters. <ul style="list-style-type: none"> • Phase A/Phase B input • Pulse/Sign input • CW/CCW input 	
	DIR1	(Connection prohibited. ^{Note 1})	Command direction input (+)		
	PULS2	Command pulse input	Command pulse input (-)		
		DIR2	Command direction input	Command direction input (-)	
		ORG	Return-to-origin	←	Starts return-to-origin when ON and stops it when OFF.
		RESET	Reset	←	Alarm reset
	SREVO	Servo ON	←	ON: servo on; OFF: servo off.	
Outputs	ORG-S	Return-to-origin end status	←	ON at return-to-origin end.	
	IN-POS	Positioning completion	←	ON when accumulated pulse in deviation counter are within specified value range.	
	/ALM	Alarm	←	ON when normal. OFF when alarm occurs.	
	SRV-S	Servo status	←	ON when servo is on.	

Note 1. When using the open collector specifications, do not connect any signal to the PULS1 and DIR1 terminals. Doing so may cause the driver to malfunction or breakdown.

Note 2. When using the line driver specifications, do not connect any signal to the OPC terminal. Doing so may cause the driver to malfunction or breakdown.