

Ordering method

TS-S2/TS-SH (TRANSERVO)

Robot positioner	Type	I/O	Battery ^{Note 1}
S2: TS-S2 SH: TS-SH	No entry: Standard S: Sensor	NP: NPN PN: PNP CC: CC-Link DN: DeviceNet™ EP: EtherNet/IP™ PT: PROFINET GW: With no I/O board	B: With battery (Absolute model) N: None (Incremental model)

Note 1. Battery can only be selected for TS-SH. (Not provided for TS-S2).

TS-X/TS-P (FLIP-X/PHASER)

Controller	Driver: Power-supply voltage/ Power capacity	Regenerative unit	LCD monitor	Input/Output Selection	Battery ^{Note 2}
TSX: TS-X TSP: TS-P	105: 100V / 100W more less 110: 100V / 200W 205: 200V / 100W more less 210: 200V / 200W 220: 200V / 400 to 600W	No entry: None R: With RGT R: With RGU-2	No entry: None L: With LCD	NP: NPN PN: PNP CC: CC-Link DN: DeviceNet™ EP: EtherNet/IP™ PT: PROFINET GW: With no I/O board	B: With battery (Absolute model) N: None (Incremental model)

Note 2. Battery can only be selected for TS-X. (Not provided for TS-P).