

# 12 Assembled Model and the List of Parts

Please refer to the photo below when attaching each component.

**RIGHT**

**FRONT**

**Seat Cowl**

- |     |     |      |
|-----|-----|------|
| I-1 | I-5 | I-9  |
| I-2 | I-6 | I-10 |
| I-3 | I-7 | I-11 |
| I-4 | I-8 | I-12 |
|     |     | I-13 |

**Fuel Tank**

- |     |     |
|-----|-----|
| D-1 | D-3 |
| D-2 | D-4 |

**Front Cowl**

- |     |      |
|-----|------|
| A-1 | A-6  |
| A-2 | A-7  |
| A-3 | A-8  |
| A-4 | A-9  |
| A-5 | A-10 |



**Exhaust**

- |     |      |      |      |      |      |
|-----|------|------|------|------|------|
| G-1 | G-7  | G-13 | G-19 | G-19 | G-25 |
| G-2 | G-8  | G-14 | G-20 | G-20 | G-26 |
| G-3 | G-9  | G-15 | G-21 | G-21 |      |
| G-4 | G-10 | G-16 | G-22 | G-22 |      |
| G-5 | G-11 | G-17 | G-23 | G-23 |      |
| G-6 | G-12 | G-18 | G-24 | G-24 |      |

**Front Tire**

- |     |      |
|-----|------|
| J-1 | J-7  |
| J-2 | J-8  |
| J-3 | J-9  |
| J-4 | J-10 |
| J-5 | J-11 |
| J-6 | J-12 |



**Steering**

- |     |      |      |
|-----|------|------|
| B-1 | B-7  | B-13 |
| B-2 | B-8  | B-14 |
| B-3 | B-9  | B-15 |
| B-4 | B-10 | B-16 |
| B-5 | B-11 | B-17 |
| B-6 | B-12 |      |

## 12 Assembled Model and the List of Parts

Please refer to the photo below when attaching each component.

LEFT

Frame

c-1	c-7	c-13	c-19
c-2	c-8	c-14	c-20
c-3	c-9	c-15	c-21
c-4	c-10	c-16	c-22
c-5	c-11	c-17	c-23
c-6	c-12	c-18	

Rear Arm

H-1	H-4	H-7	F-10
H-2	H-5	H-8	F-11
H-3	H-6	H-9	

REAR



Under Cowl

F-1	F-4	F-7	F-10	F-13
F-2	F-5	F-8	F-11	F-14
F-3	F-6	F-9	F-12	

Engine

E-1	E-7	E-13	E-19	E-19	E-25
E-2	E-8	E-14	E-20	E-20	E-26
E-3	E-9	E-15	E-21	E-21	
E-4	E-10	E-16	E-22	E-22	
E-5	E-11	E-17	E-23	E-23	
E-6	E-12	E-18	E-24	E-24	



Rear Tire

K-1	K-7
K-2	K-8
K-3	K-9
K-4	K-10
K-5	K-11
K-6	K-12