







# YK500TW

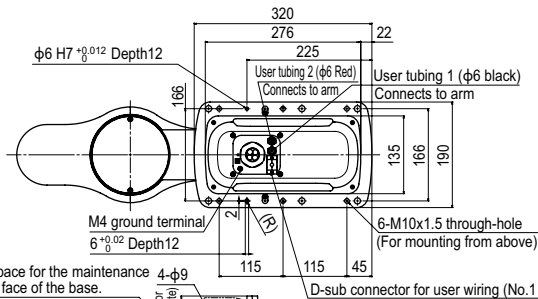

Keep enough space for the maintenance work on the top face of the base.

Note: Upper section requires a space of at least 250mm for detaching/attaching cover.

R27 (Min. cable bending radius) Do not move the cable.

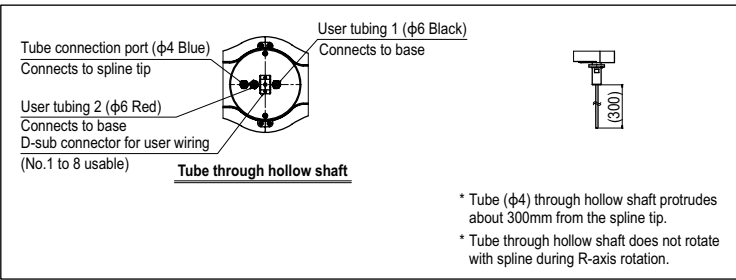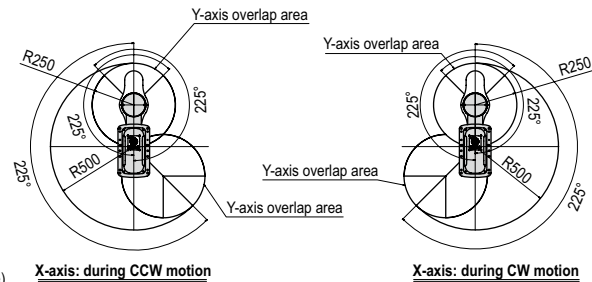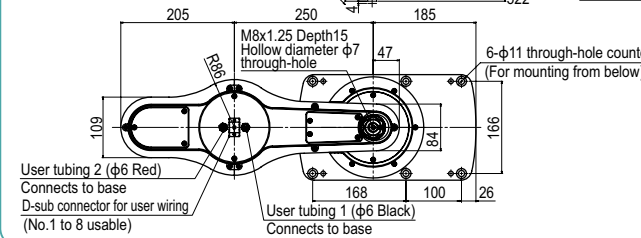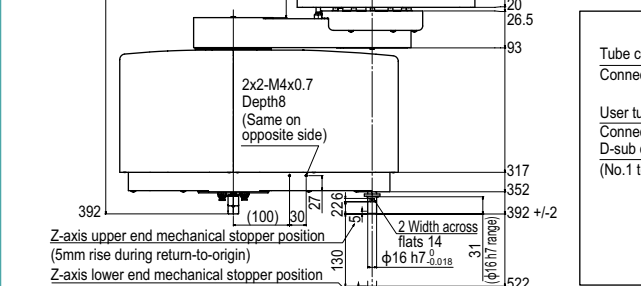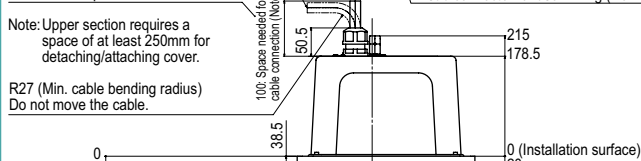

\* Tube (φ4) through hollow shaft protrudes about 300mm from the spline tip.  
 \* Tube through hollow shaft does not rotate with spline during R-axis rotation.