YK600XGLP

■ Ordering method

RCX340-4 YK600XGLP-150 No entry: None F: With tool flange Specify various controller setting items. RCX340 ▶ P.678

■ Specifications						
		X-axis	Y-axis	Z-axis	R-axis	
Arm length		350 mm	250 mm	150 mm	-	
specifications Rotation angle		+/-129 °	+/-144 °	-	+/-360 °	
AC servo motor output		200 W	150 W	50 W	100 W	
Transmission	Motor to speed reducer	Direct-coupled				
method	Speed reducer to output		Direct-	coupled		
Repeatability Note 1		+/-0.01 mm		+/-0.01 mm	+/-0.004 °	
Maximum speed		4.9 m/sec		1.1 m/sec	1020 °/sec	
Maximum payload		4 kg				
Standard cycle time: with 2kg payload Note 2		0.71 sec				
R-axis tolerable moment of inertia Note 3		0.05 kgm²				
Protection class Note 4		Equivalent to IP65 (IEC 60529)				
User wiring (sq × wires)		0.2 × 10				
User tubing (Outer diameter)		ф 4 × 4				
Travel limit		1.Soft limit 2.Mechanical stopper (X,Y,Z axis)				
Robot cable length			Standard: 3.5 m Option: 5 m, 10 m			
Weight		26 kg				
	Arm length Rotation anglor output Transmission method Note 1 ed load e time: with 2k ele moment of ss Note 4 q × wires) Outer diameter	Arm length Rotation angle or output Transmission method Speed reducer to output Note 1 ed load et ime: with 2kg payload Note 2 ele moment of inertia Note 3 ss Note 4 q × wires) Outer diameter)	X-axis Arm length 350 mm Rotation angle +/-129 ° or output 200 W Transmission ethod Speed reducer to output Note 1 +/-0.0 ed 4.9 m load et ime: with 2kg payload Note 2 ele moment of inertia Note 3 ss Note 4 q × wires) Outer diameter) 1.Soft	X-axis Y-axis Arm length 350 mm 250 mm Rotation angle	X-axis Y-axis Z-axis	

■ Controller Controller Power capacity (VA) Operation method Programming / I/O point trace / Remote command / RCX340 1000 Operation using RS-232C communication


Note. The movement range can be limited by changing the positions The movement range can be limited by changing the positions of X and Y axis mechanical stoppers. (The movement range is set to the maximum at the time of shipment.)

See our robot manuals (installation manuals) for detailed information.

To set the standard coordinates with high accuracy, use a standard coordinate setting jig (option). Refer to the user's manual (installation manual) for more details.


Our robot manuals (installation manuals) can be downloaded from our website at the address below https://global.yamaha-motor.com/business/robot/

Note 1. This is the value at a constant ambient temperature. (X,Y axes)
Note 2. When reciprocating 25mm in vertical direction and 300mm in horizontal direction (rough-positioning arch motion).
Note 3. The acceleration coefficient is set automatically in accordance with the tip weight and R-axis moment of inertia settings.
Note 4. Do not use robots where the bellows section is directly exposed to water jet. Contact our distributor for information on drip-proof structure preventing liquid other than water.

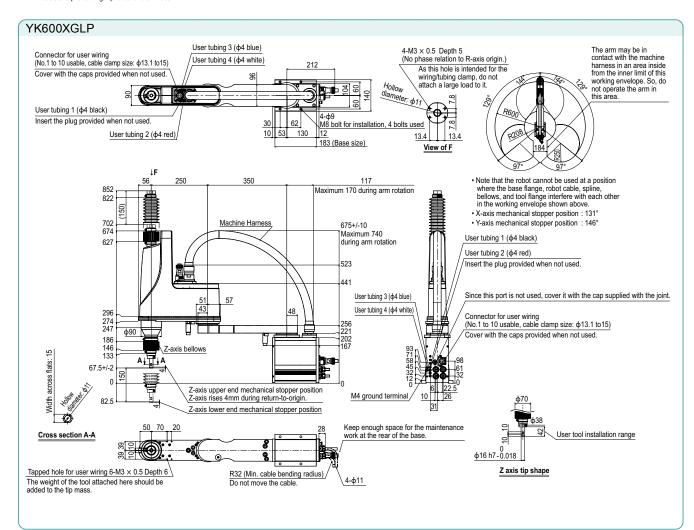

545

546

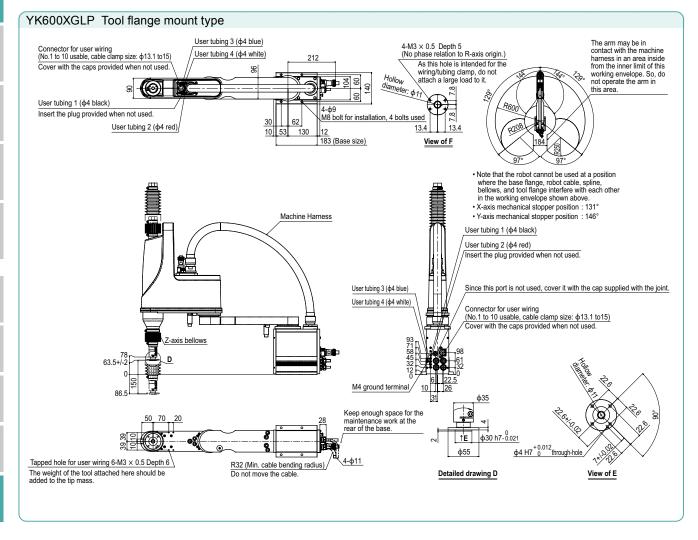

RCX340 ► 678